

# How to fill up with LNG



**SWITCH OFF THE ENGINE. LEAVE ALL ELECTRONIC DEVICES SUCH AS CELL PHONES IN THE VEHICLE**



## WEAR PROTECTIVE CLOTHING

Wear a hard helmet with a full-face protective visor. Wear leather work gloves to protect against the cold. Gloves and sleeves must overlap to protect the skin from any splashes.

Wear full body protective clothing designed to protect against severe cold and flames and to prevent static electricity.

Wear safety ankle boots without laces. Trouser bottoms must overlap the edge of the boot to prevent any splashes from getting into the boot.



## IN CASE OF EMERGENCY

Press the emergency stop button and call **112**. **Only press the emergency stop button in an emergency.**



**NEED ASSISTANCE?** Call customer service: +358 800 122 722

A LED bar lights up below the display.  
If the red light is on, the pump is out of order.  
Use another dispenser or call customer service: +358 800 122 722



## HOW TO FILL UP:

1

Before refueling, ensure that all nozzles are correctly positioned at the bottom in parking position. Connect the earthing cable to the vehicle fuel tank. When earthing has been correctly done, a green lamp will light up on the refueling nozzle on the short side of the dispenser and a truck symbol will appear on the display. 


2

**Always clean the refueling nozzle and the connector of the vehicle with the compressed air gun to avoid gas leakage and wear of equipment and own vehicle.**

**SCANIA/IVECO:** The tank needs to be ventilated if the pressure exceeds 10 bar. Connect ventilator nozzle on the vehicle tank. Open the valve on the vehicle tank. Close the valve once the pressure is lower than 9 bar. Place the ventilation nozzle in its default location. Ensure that the nozzle is correctly positioned at the bottom in parking position.

3

Connect the refueling nozzle to the vehicle tank and push the handles forward until the nozzle is locked in position. In case of trouble connecting the nozzle, make sure the handles are fully retracted. If not, press the red button and pull the handles all the way back.

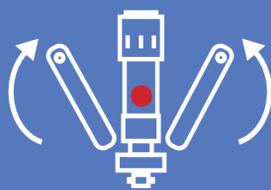

**VOLVO:** If tank pressure exceeds 10 bar, the tank needs to be vented by opening the valve on the vehicle tank. Close the valve once pressure has fallen below 9 bar.

Press the blue button on the dispenser. Cooler gas has been selected once the button lights up.

5

Pay at the payment terminal. Filling up must begin within 2 minutes.

6

You can begin to fill up when the actual price is shown on the display and the arrows light up.  Press the black button and keep it held down to fill up. A safety function will stop the filling process if the button is released. Release the button to stop refueling.

7

Refueling is automatically terminated once the counting stops in the display. To stop refueling manually, release the black button. **Note! Never press the emergency stop button to stop refueling. The emergency stop must only be used in case of emergency.** 

8

Wait until **End** appears on the display. Pull the handles back to disconnect the refueling nozzle from the vehicle. Press the red button on the nozzle and then disengage the nozzle. Place the refueling nozzle in its default position. Do not push the handles forward during this process. Ensure that the nozzle is correctly positioned at the bottom in parking position. A pressure releasing sound can be heard when the nozzle is correctly positioned.



9

Disconnect the earthing cable.



**DONE! DRIVE SAFELY**

**Gasum**